


## tcentric

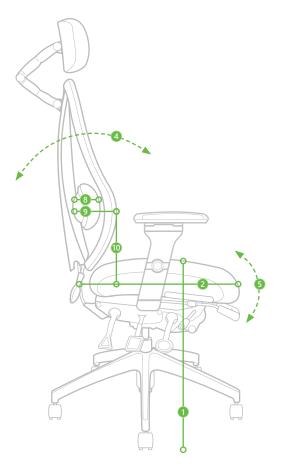

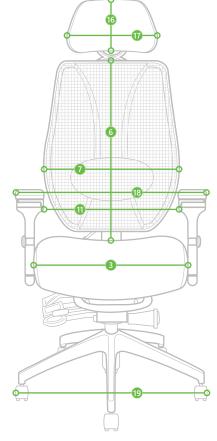

Small arm pad

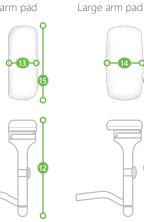

## **MEASUREMENTS** (AS MEASURED ON A MULTI-TILT MECHANISM)

0	Seat height 70 mm gas lift		16.3"-19.2"
	Seat height 80 mm gas lift		17.3"-20.3"
	Seat height 100 mm gas lift		18"-21.9"
	Seat height 125 mm gas lift		17.7"-22.7"
	Seat height 125 mm LT gas lift (standard)		17"-22"
	Seat height 140 mm gas lift		19.5"-24.8"
2	Seat depth range – large seat (standard)*		17"-19.5"
3	Seat width – large seat (standard)*		20"
4	Back angle adjustment range to the horizontal		89°-105° (16° range)
6	Seat pan angle (18° range)	5° forward	13° backward
6	Backrest height		23"-28"
7	Backrest width		19"
8	Lumbar depth		4.75"
9	Air lumbar depth range		4.75"-6"
10	Lumbar height range		6.5"-11.5"

Measurements in inches.

Where the chair is adjustable, minimum and maximum measurements are listed.

\* Optional seat sizes:

Extra small (17.5"w x 15.5"d), small (18.5"w x 17"d), plus size (22"w x 19"d), extra long (20"w x 21"d) and extra deep (22"w x 21"d).

	Distance between arms with height adjustment only				
1	small pad: 17.75"-21.75" la	arge pad: 15.	5"-19.5"		
	Distance between arms with height and lateral adjustments				
	small pad: 12.75" – 21.75" la	arge pad: 10.	5"-19.5"		
	Distance between arms with height and swivel adjustments				
	small pad: 17.75"-21.75" la	arge pad: 15.5	"-21.75"		
	Distance between arms with height, swivel and lateral adjustments				
	small pad: 12.75" – 21.75" la	arge pad: 10.5	"-21.75"		
12	Armrest height without lateral adj	ustments	5.75"-9.75"		
	Armrest height with lateral adjustments		6.5"-10.5"		
	Arm pad width 🛛 🔞 small pad	: 3.75" 🛛 🚺	large pad: 5"		
15	Arm pad length		10"		
16	Headrest height		7.5"		
17	Headrest width		12.25"		
18	Max. chair width with armrests fully extended		29.5"		
19	Footbase diameter		26"		
	Weight		57.9 lbs		
	Weight without headrest		55.5 lbs		
	Weight without headrest and TCL360		43.6 lbs		

ergoCentric ergocentric.com