

tcentric hybrid.

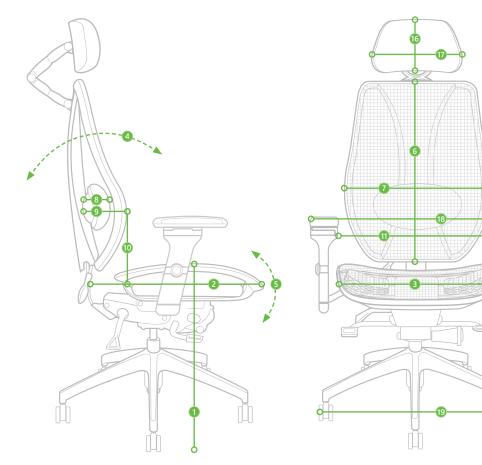

Small arm pad



Large arm pad

MEASUREMENTS (AS MEASURED ON A SYNCHRO GLIDE MECHANISM)

	Seat height 70 mm gas lift		16.1"-19"
	Seat height 80 mm gas lift		17.1"-20.1"
•	Seat height 100 mm gas lift		17.8"-21.7"
U	Seat height 125 mm gas lift		17.5"-22.5"
	Seat height 125 mm LT gas lift (sta	andard)	16.8"-21.8"
	Seat height 140 mm gas lift		19.3"-24.6"
2	Seat depth range – large seat (standard)*		17"-18.5"
3	Seat width – large seat (standard)*		21"
4	Back angle adjustment range to the horizontal		89°-105° (16° range)
6	Seat pan angle (6° range)	3.5° forward	2.5° backward
6	Backrest height		23"-28"
0	Backrest width		19"
8	Lumbar depth		4.75"
9	Air lumbar depth range		4.75"-6"
10	Lumbar height range		6.5"-11.5"

Measurements in inches.

Where the chair is adjustable, minimum and maximum measurements are listed.

* Optional upholstered seat sizes include:

Extra small (17.5"w x 15.5"d), small (18.5"w x 17"d), standard (20"w x 19"w), plus size (22"w x 19"d), extra long (20"w x 21"d) and extra deep (22"w x 21"d).

	Distance between arms with height adjustment only			
	small pad: 20.25" large pad: 18"			
	Distance between arms with height and lateral adjustments			
~	small pad: 15.25-20.25" large pad: 13"-18"			
0	Distance between arms with height and swivel adjustments			
	small pad: 20.25" large pad: 18"-20.2	5"		
	Distance between arms with height, swivel and lateral adjustments			
	small pad: 15.25-20.25" large pad: 13"-20.2	5"		
•	Armrest height without lateral adjustments	5.75"-9.75"		
12	Armrest height with lateral adjustments	6.5"-10.5"		
	Arm pad width 🛛 🔞 small pad: 3.75" 🛛 🔞	large pad: 5"		
15	Arm pad length	10"		
16	Headrest height	7.5"		
17	Headrest width	12.25"		
18	Max. chair width with armrests fully extended	28"		
19	Footbase diameter	26"		
	Weight	60.65 lbs		
	Weight without headrest	58.25 lbs		
	Weight without headrest and TCL360	46.35 lbs		

ergoCentric ergocentric.com